



INSTALLING SAFETY SHIELDS

- Wrap the safety spray shield tightly around the flange, valve or fitting.
- Press the two portions of the velcro fastener together to close the shield.
- Pull the tie cords together tightly on each side, take one or two turns around the pipe and fasten over the pipe with a square knot. In the event of a leak, a square knot tightens when subjected to pressure, avoiding the risk that the shield loosens and slides off the fitting or valve. If incorrectly tied, a granny knot results and under pressure, this knot becomes untied allowing the shield to be ineffective in preventing a sprayout.
- Do not cut the tie cords but tuck them between the flange and shield.


Square (Reef) Knot Instructions

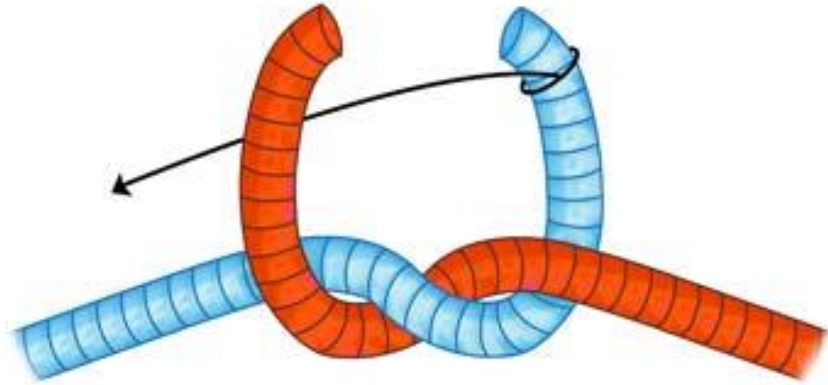


1 Cross the blue and red ends

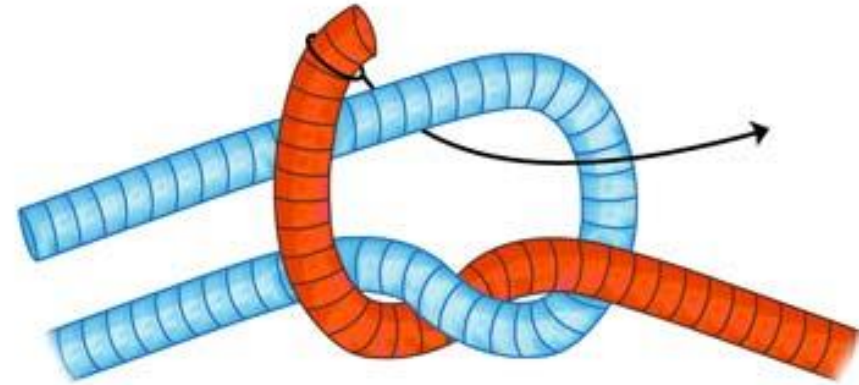

2 Pass the red end through the blue loop

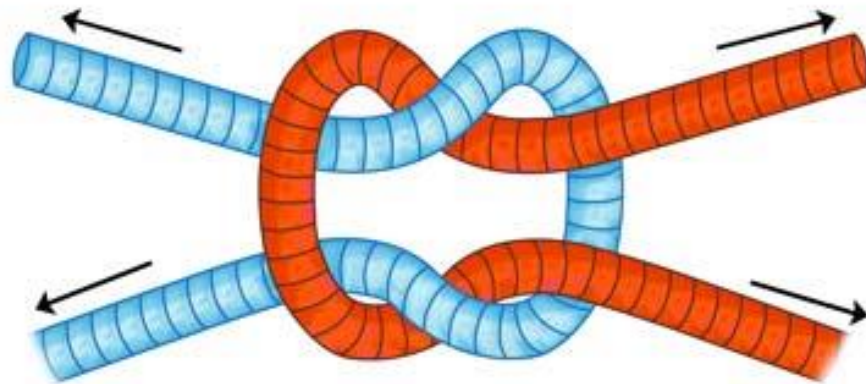

3 Pull the ends to tighten

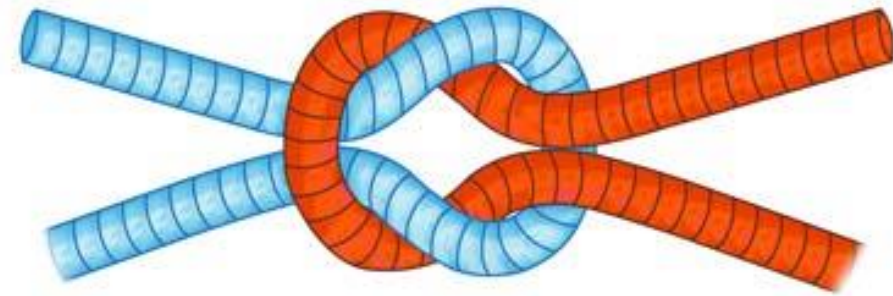

4 The knot is complete